



SERVICE PARTS LIST

BULLETIN NO.
54-44-0554

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN 54-44-0553	DATE Sept. 2013
18 GAUGE SHEAR			
CATALOG NO. 6852-20	SERIAL NUMBER PREFIX & BREAK	A80E	
		WIRING INSTRUCTION See Pages 2 & 3	

EXAMPLE:
Component Parts (Small #)
Are Included When Ordering
The Assembly (Large #).

★ = Part number change from
previous service parts list.

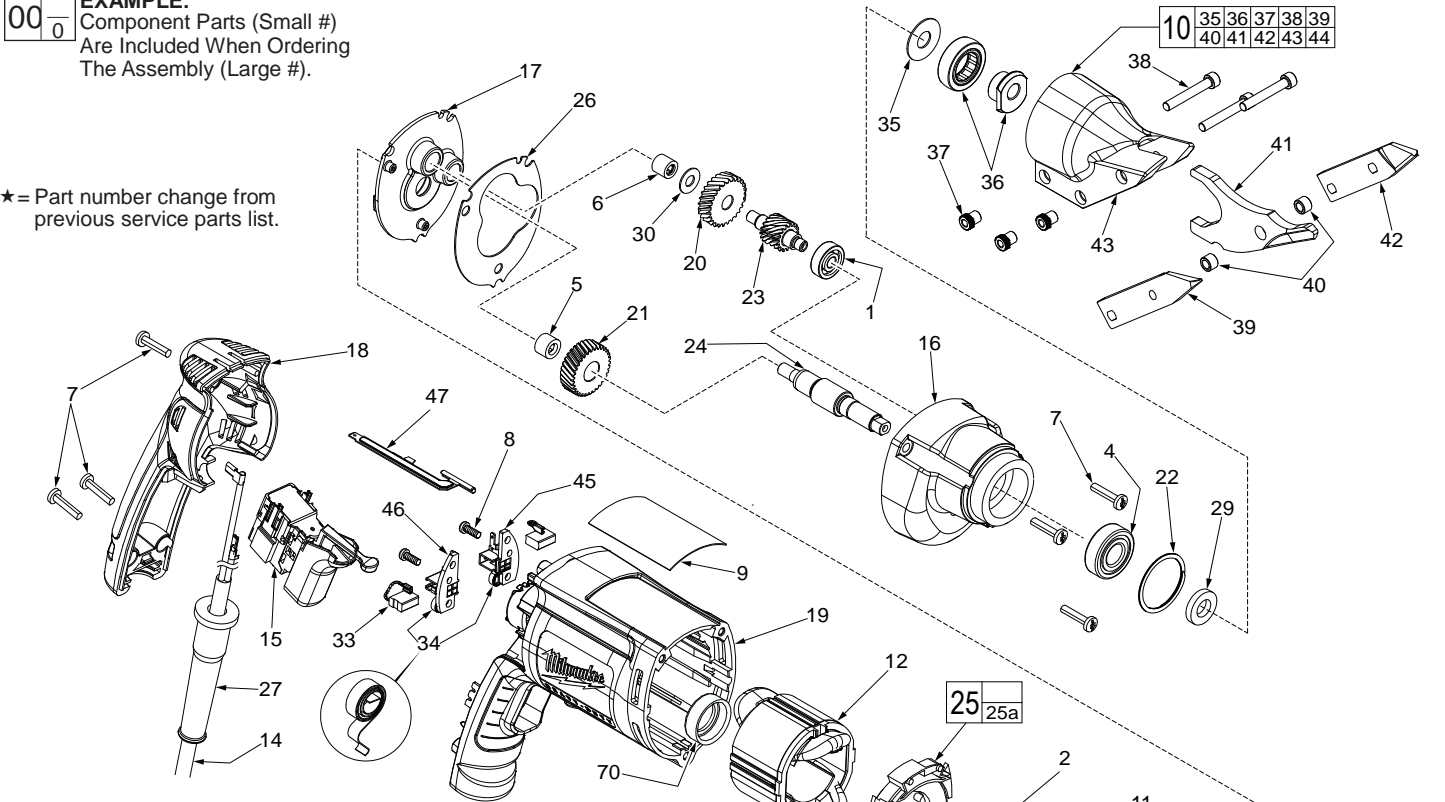


FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	02-04-0640	Ball Bearing	(1)
2	02-04-0645	Ball Bearing	(1)
3	02-04-0852	Ball Bearing	(1)
4	02-04-1020	Ball Bearing	(1)
5	02-50-1611	Needle Bearing	(1)
6	02-50-2400	Needle Bearing	(1)
7	06-82-7275	7-18 x .75 Slotted Plastite T-20	(6)
8	06-88-1610	M3.5 x 10 Pan Hd. Plastite Screw	(2)
9	12-99-2665	Service Nameplate	(1)
10	48-08-0500	Shear Head Assy. (Includes 35 thru 44)	(1)
11	16-10-2210	Armature Assembly	(1)
12	18-07-7220	Field	(1)
14	22-64-6510	Cord Set	(1)
15	23-66-2625	Defond Switch (See wiring on page 2)	(1)
15a	23-66-2587	Marquardt Switch (See wiring on page 3)	(1)
16	28-14-2394	Gearcase	(1)
17	28-28-2320	Diaphragm	(1)
18	31-15-2010	Handle Halve	(1)
★19	31-50-0526	Motor Housing	(1)
20	32-40-0100	Intermediate Gear	(1)
21	32-75-0115	Spindle gear	(1)
22	34-80-1400	Retaining Ring	(1)
23	36-66-0125	Intermediate Pinion	(1)
24	38-50-5754	Spindle	(1)
25	42-14-0450	Baffle Assembly	(1)
25a	45-30-0030	Slug (Not Shown)	(2)
26	43-44-0985	Gasket	(1)
27	44-76-0210	Cord Protector	(1)
29	45-88-0396	Chuck Washer	(1)
30	45-88-7990	Thrust Washer	(1)
33	22-18-1310	Brush Assembly	(2)
34	23-52-1610	Brush Spring	(2)
35	45-88-7310	Washer	(1)
36	43-16-0100	Eccentric Assembly	(1)
37	43-84-0460	Knurled Insert	(3)
38	06-75-2115	10-24 x 1-1/4 Skt. Hd. Cap Screw	(3)
39	48-44-0170	Blade - Right Side	(1)
40	42-40-0520	Bushing	(2)
41	48-44-0150	Blade - Center	(1)
42	48-44-0160	Blade - Left Side	(1)
43	43-76-0400	Shear Housing	(1)

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
44	49-96-0070	5/32 Hex Allen Wrench (Not Shown)	(1)
45	22-20-0090	Left Brush Holder	(1)
46	22-20-0095	Right Brush Holder	(1)
47	44-60-1700	Ground Pin	(1)
★70	43-86-0125	Bearing Cup	(1)
	23-94-0490	White Leadwire Assy. (See pages 2 & 3)	(1)
	23-94-0495	Red Leadwire Assy. (See pages 2 & 3)	(1)

FIG. LUBRICATION:
16 Place 5 grams (3/16 oz.) of Type "Y" Grease, No. 49-08-5270 on top of the inserted intermediate ball bearing (1) and on the intermediate pinion (23). After inserting the balance of the gear ing mechanism (20, 30, 28 and 21), place 13 grams (1/2 oz.) of "Y" Grease at the armature pinion centerline in the gearcase and fill to the top of the intermediate gear (20). Grease must contact at least 25% of the intermediate gear teeth.

36,40,41 During assembly, use a dab of Type "E" Grease, No. 49-08-4122 to lubricate flats, pivot hole and sides of center blade (41), eccentric assembly (36) and bushing (40).

5,6,17 Before assembly, lightly coat all press fit areas with lightweight spindle oil.

FIG. NOTES:
5,6,17 Needle bearings to be pressed flush to .010 under flush from the end which has the vendors identification.